



ZENITH Chassis 6GT40Z1 & 6GT40Z2, Model "Royal 50"
 (Additional service material on page 187)

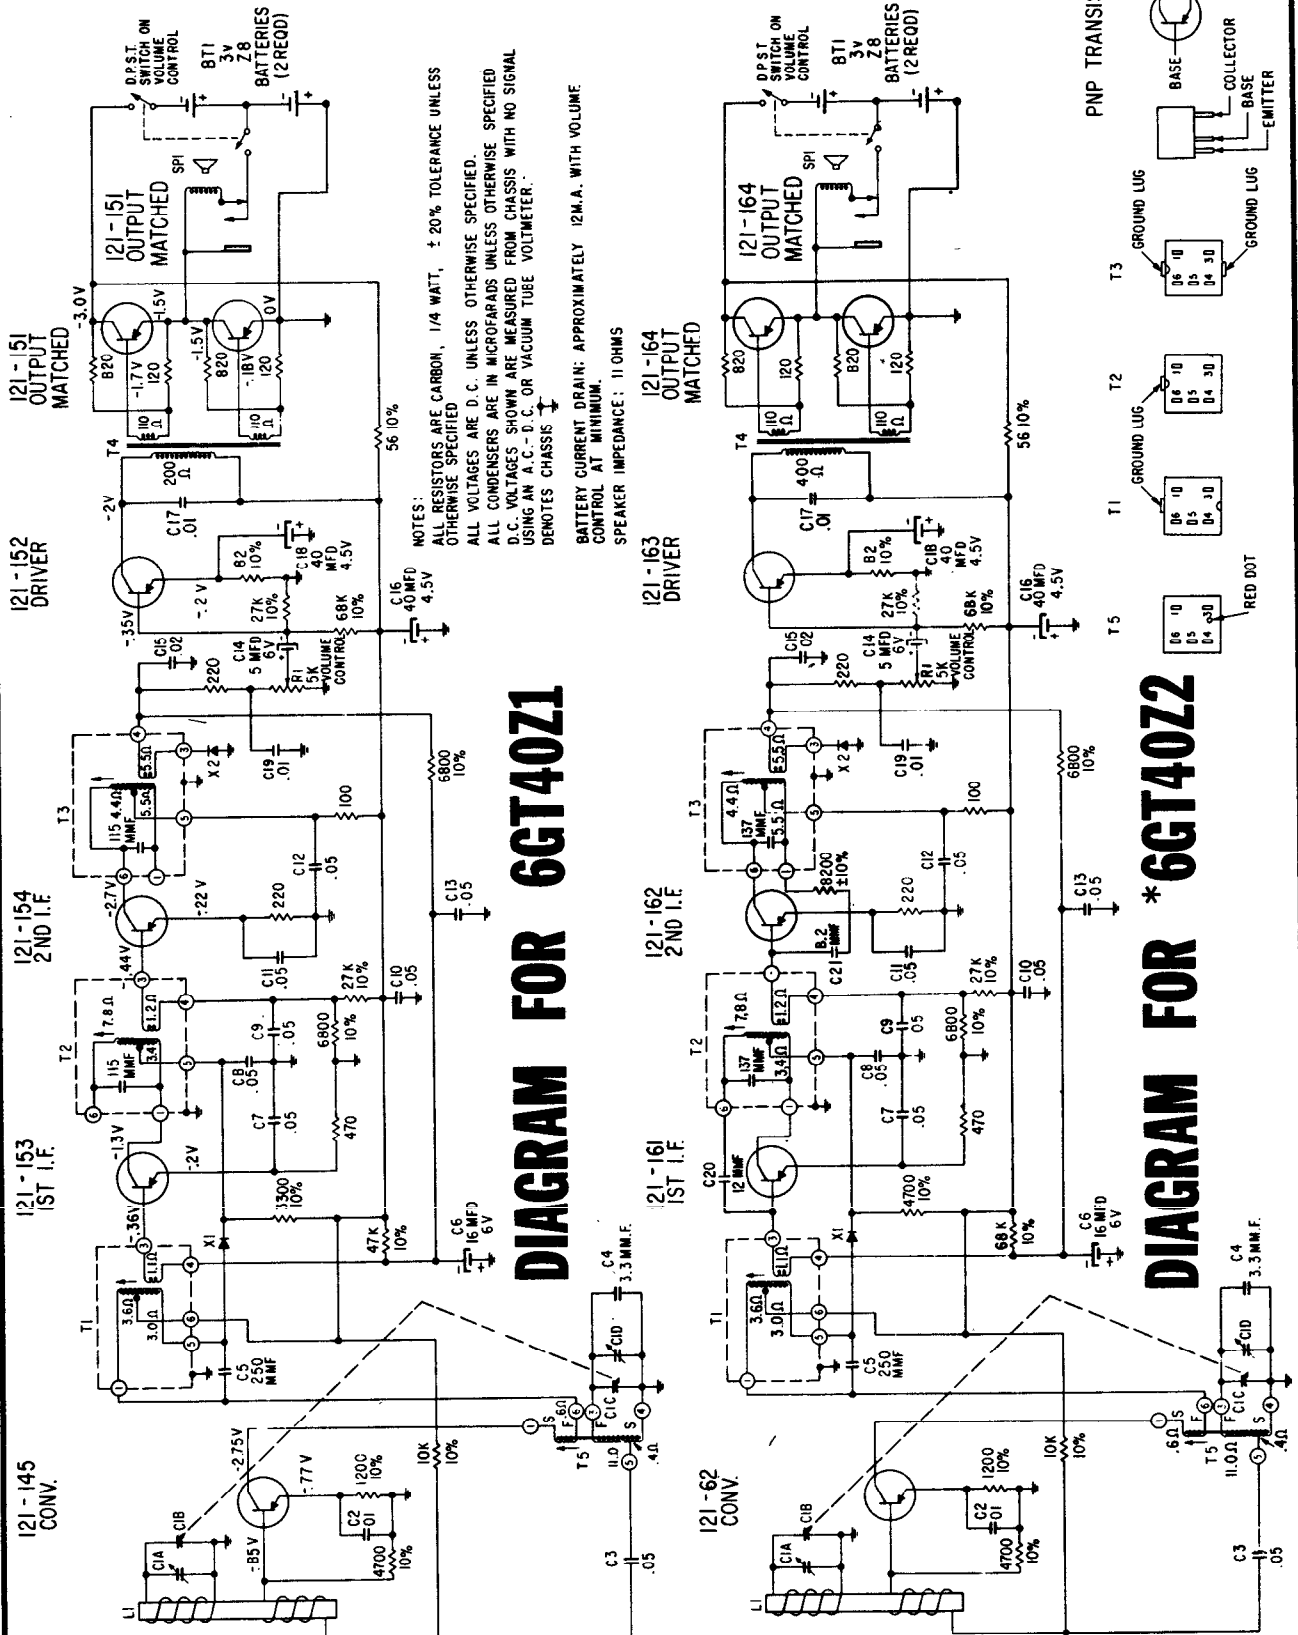

VOLUME R-21, MOST-OFTEN-NEEDED 1961 RADIO SERVICING INFORMATION

ZENITH Chassis 6GT40Z1 & 6GT40Z2, Model "Royal 50" Continued

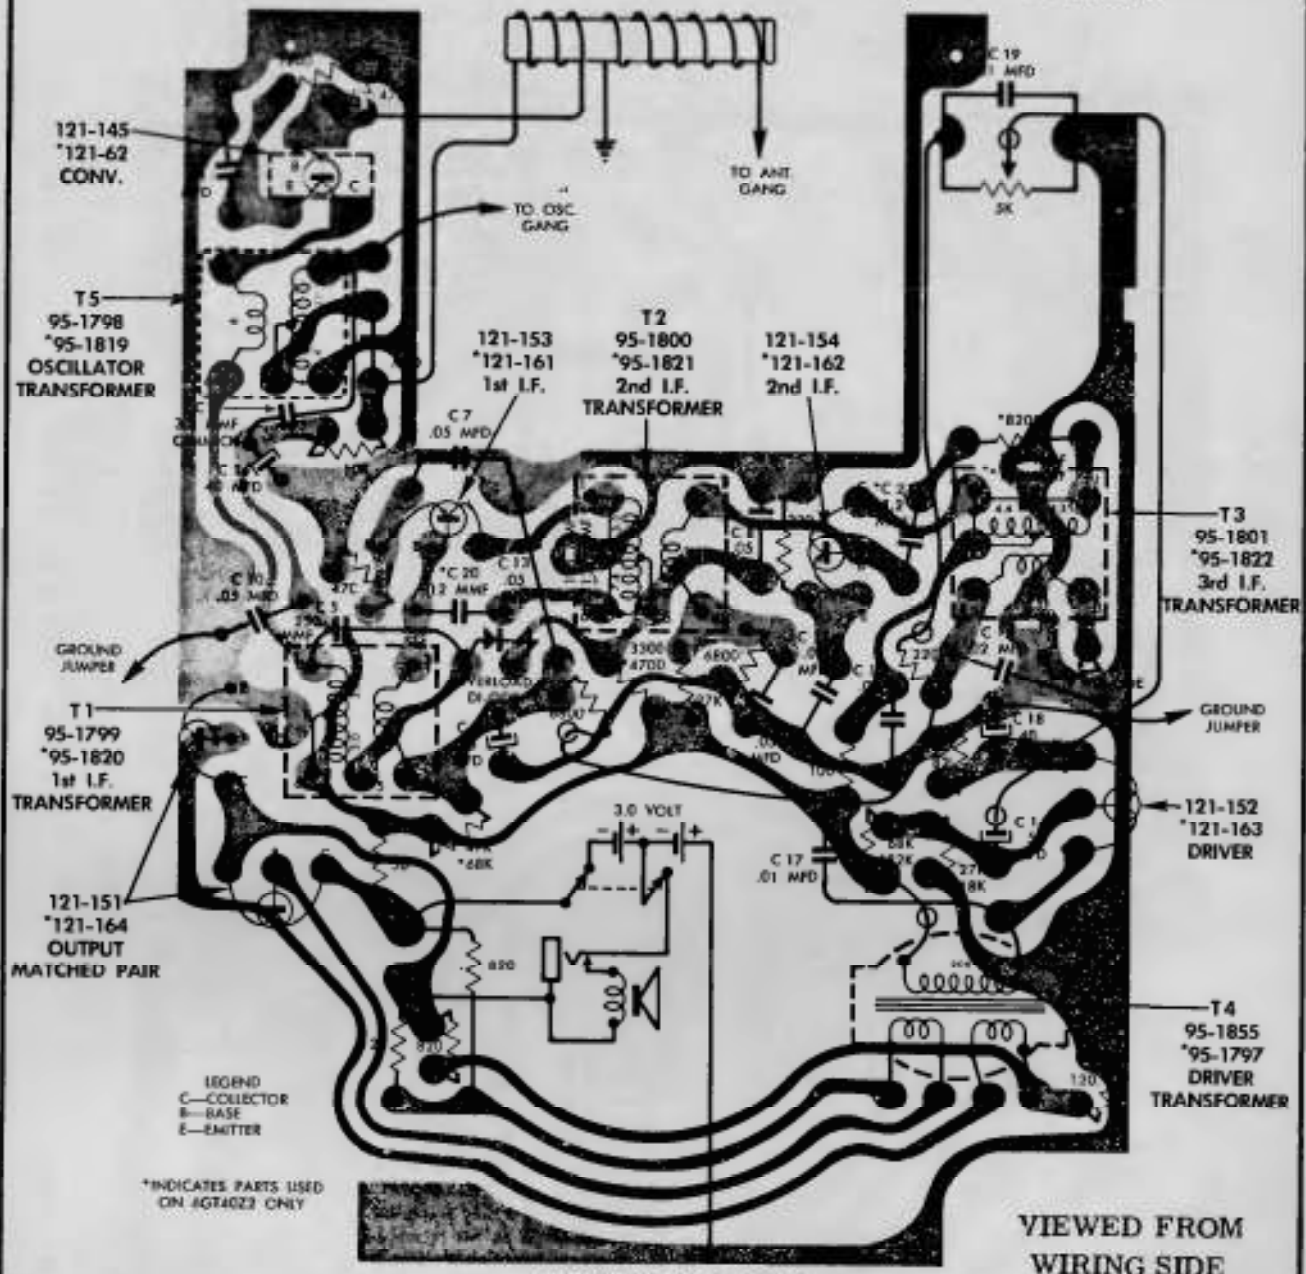

ALIGNMENT PROCEDURE

Operation	Input Signal Frequency	Connect Inner Conductor From Oscillator To	Connect Outer Shield Conductor From Oscillator To	Set Dial At	Trimmers	Purpose
1	455 KC	ONE TURN LOOSELY COUPLED TO WAVEMAGNET	Chassis	600 KC	Adj. T1, T2, T3 for maximum output.	For I.F. Alignment
2	1620 KC		—	Gang wide open.	C1D	Set Oscillator to dial scale.
3	600 KC		—	Near 600 KC	Adjust slug in T5	While rocking gang, adjust T5 for maximum output regardless of dial accuracy.
4	REPEAT STEPS 2 & 3		—	—	—	—
5	1260 KC		—	1260 KC	C1A	Align loop ant.