VOLUME R-20, MOST-OFTEN-NEEDED 1960 RADIO

ZENITH RADIO Chassis 7AT46Z1

Model "Royal 950"

(Continued on page 190, over)

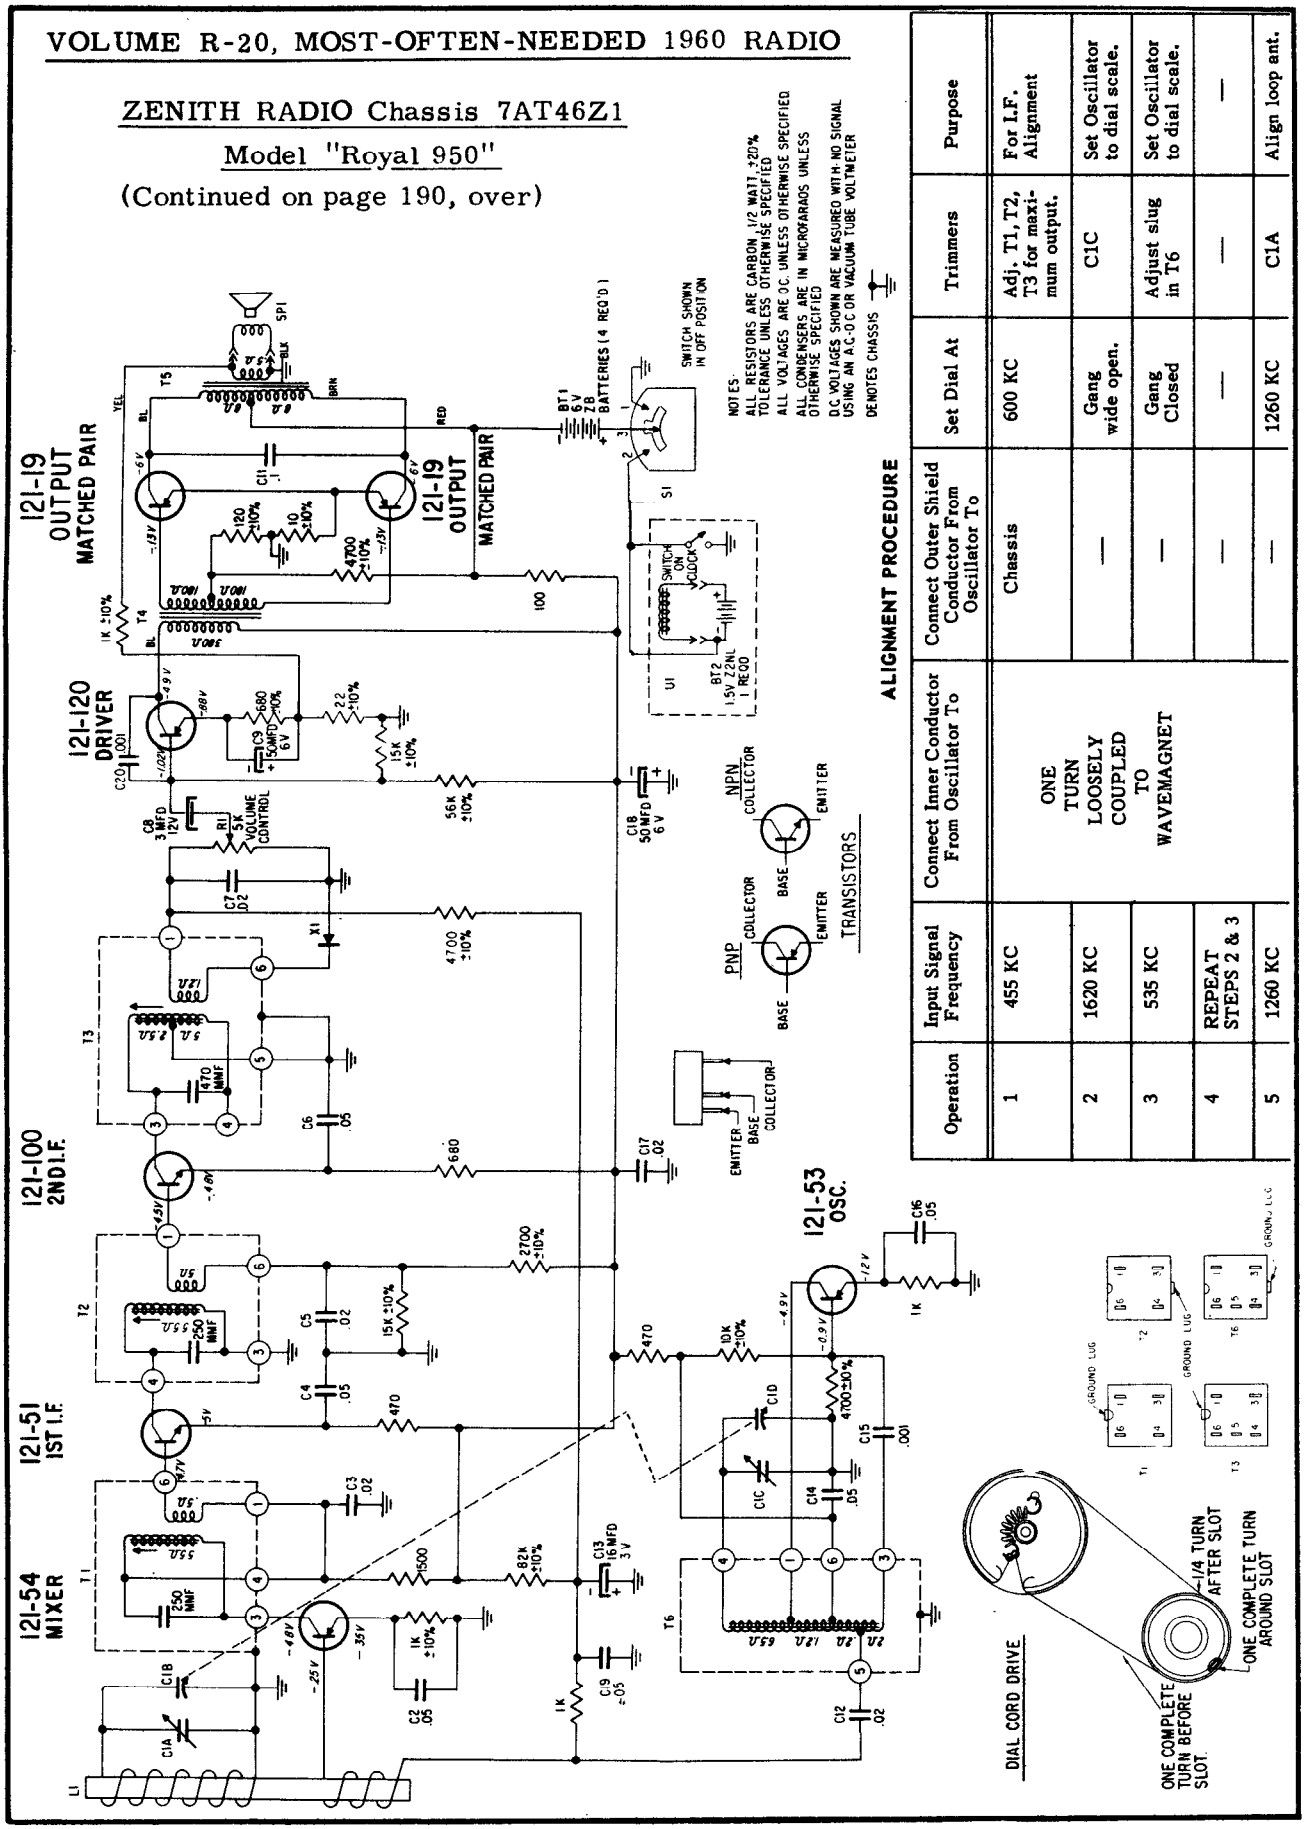

ALIGNMENT PROCEDURE

Operation	Input Signal Frequency	Connect Inner Conductor From Oscillator To	Connect Outer Shield Conductor From Oscillator To	Set Dial At	Trimmers	Purpose
1	455 KC	ONE TURN LOOSELY COUPLED TO WAVEMAGNET	Chassis	600 KC	Adj. T1, T2, T3 for maximum output.	For I.F. Alignment
2	1620 KC		—	Gang wide open.	C1C	Set Oscillator to dial scale.
3	535 KC		—	Gang Closed	Adjust slug in T6	Set Oscillator to dial scale.
4	REPEAT STEPS 2 & 3		—	—	—	—
5	1260 KC		—	1260 KC	C1A	Align loop ant.

ZENITH RADIO Chassis 7AT46Z1

Model "Royal 950"

(Continued from page 189)

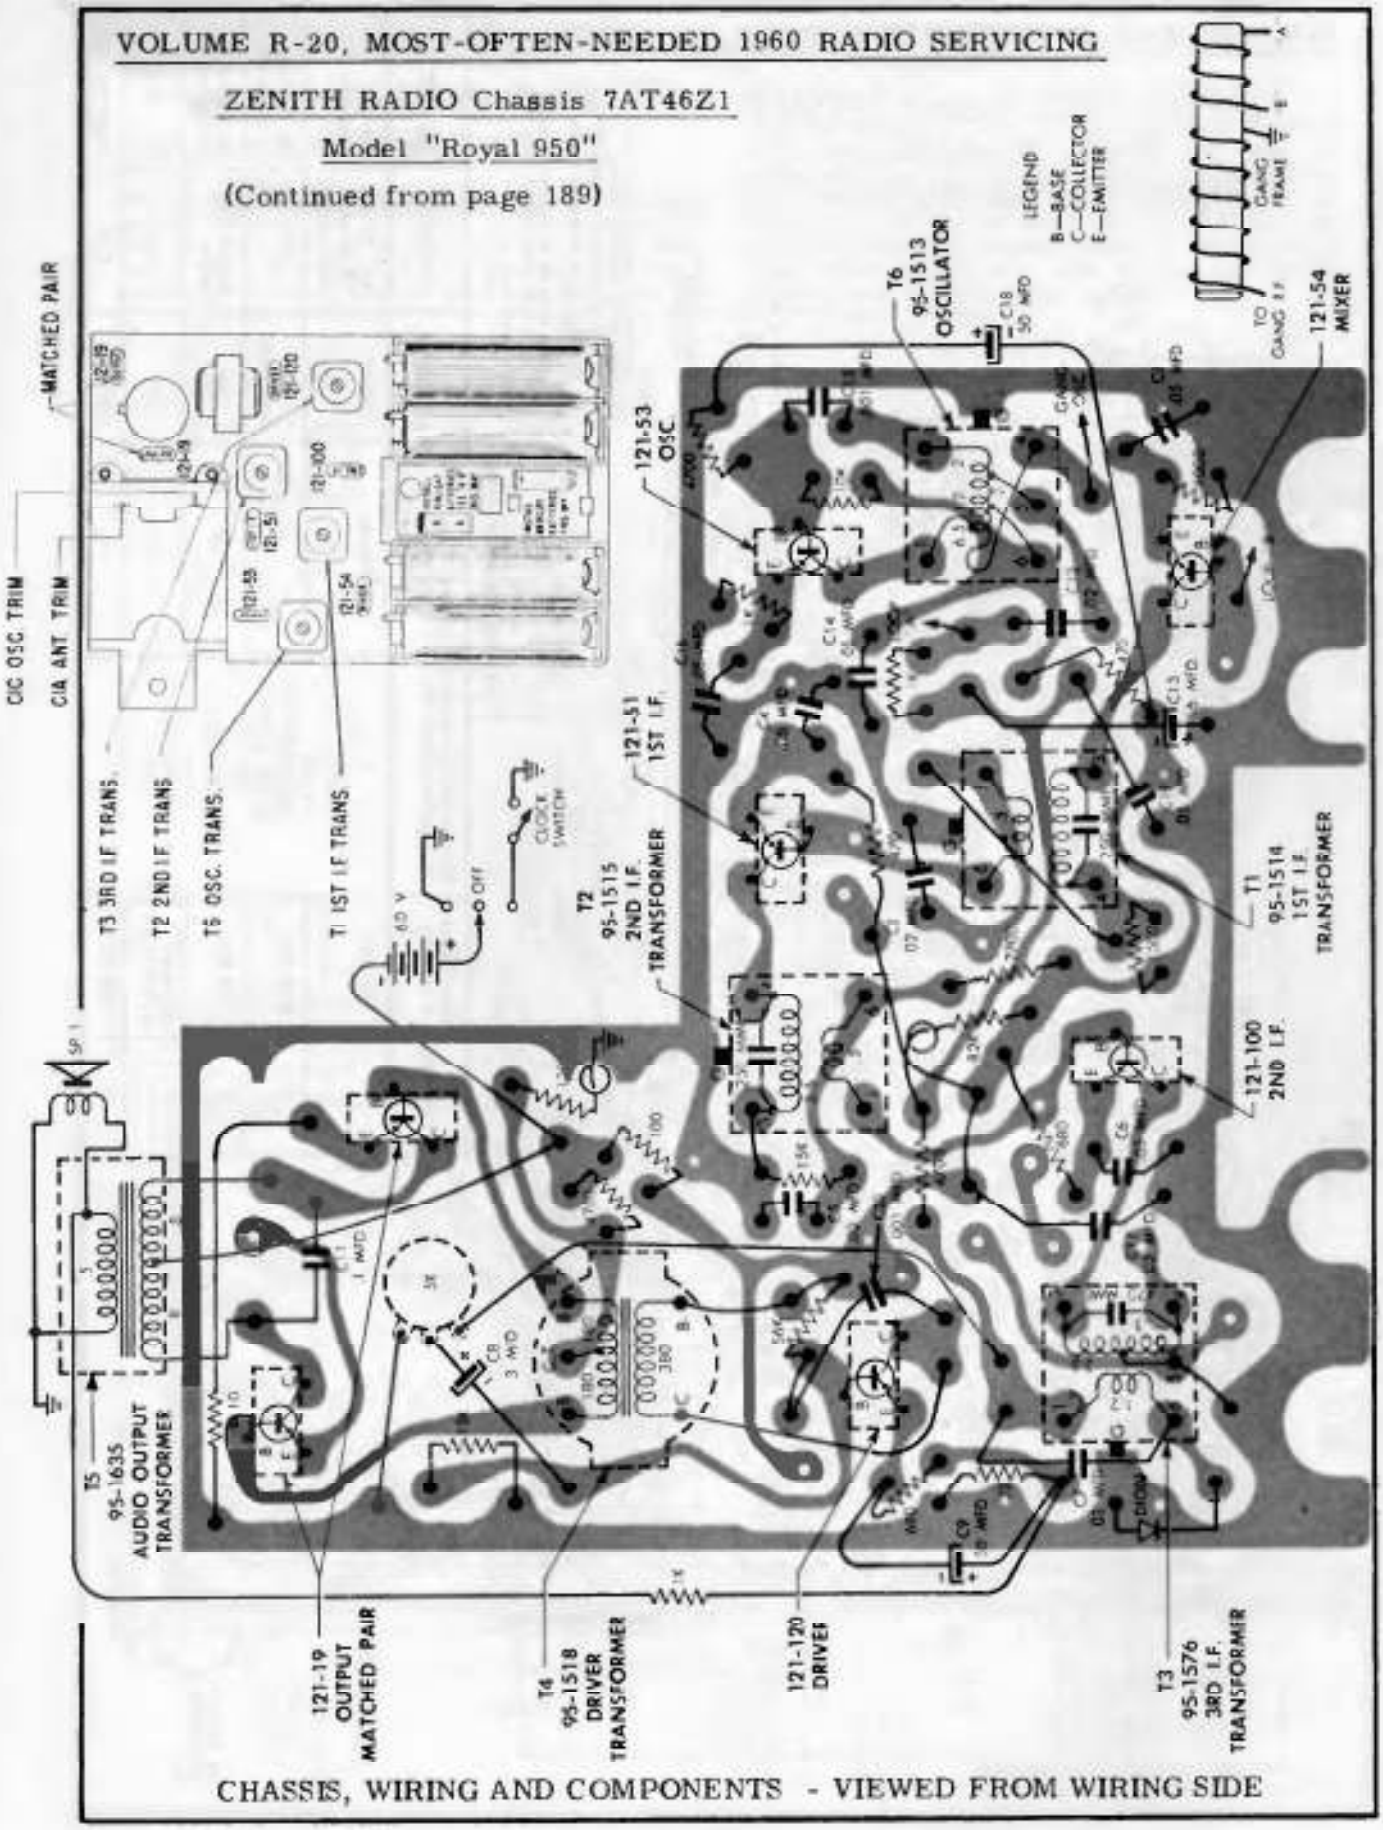

CHASSIS, WIRING AND COMPONENTS - VIEWED FROM WIRING SIDE